ASP HANDBOOK

QUICK FIX GUIDE 23

DOES YOUR INTERNAL FILTER HAVE LOW FLOW?

Troubleshoot your internal filter with these 5 quick checks.

1



CHECK THE OUTLET

Make sure the outlet is not blocked or restricted by debris or a closed flow control.


2



CHECK THE INTAKE SPONGE

A dirty sponge can restrict water flow. Remove and rinse in old tank water.


3

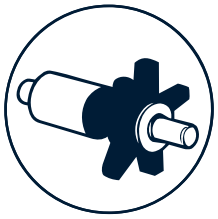

CHECK THE IMPELLER

Unplug the filter, remove the impeller and clean away any debris. Check it spins freely and isn't worn or damaged.


4

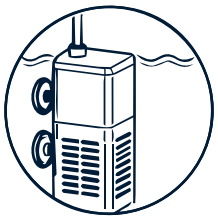

CHECK THE WATER LEVEL

Ensure the filter is fully submerged to the recommended water level for optimal performance.

5

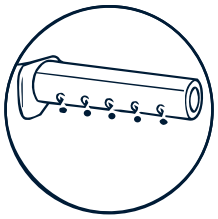

CHECK THE SPRAY BAR

Clean the spray bar and holes to remove any blockages that may reduce flow.