
ASP HANDBOOK

QUICK FIX GUIDE 22

IS YOUR INTERNAL FILTER NOISY OR RATTLING?

Troubleshoot your internal filter with these 5 quick checks.

1

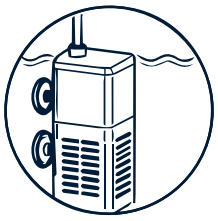

CHECK THE POSITION

Make sure the filter is mounted securely and isn't touching the glass, gravel or decorations.


2



CHECK THE INTAKE

Remove and clean the intake sponge. Debris can cause vibration and noise.


3

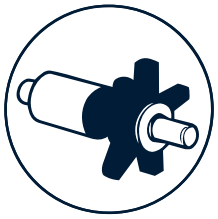

CHECK THE IMPELLER

Unplug the filter, remove the impeller and clean away any debris. Check it spins freely and isn't worn or damaged.


4

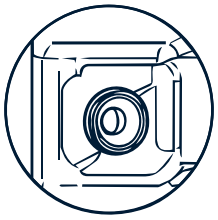

CHECK THE IMPELLER CHAMBER

Make sure the rubber bush or mount is in place and not worn. Refit the impeller correctly.

5

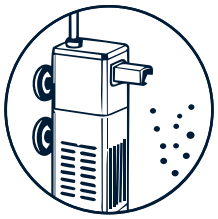

REASSEMBLE & TEST

Put all parts back together, ensure the filter is fully submerged and plug it in to test. The noise should be reduced.